



ASSEMBLY INSTRUCTIONS

# EZO STAND OFF

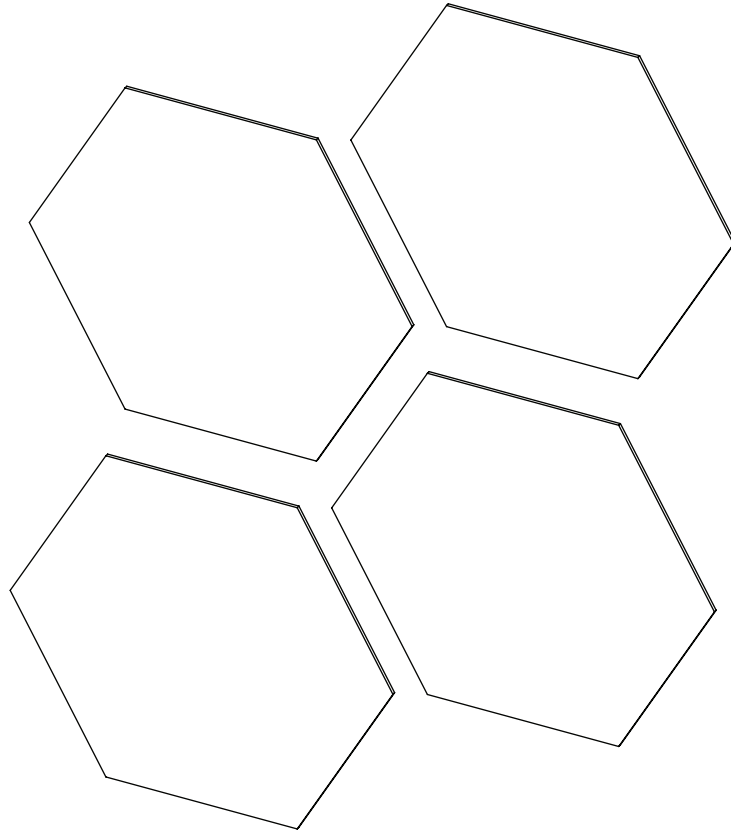

## INSTALLATION HARDWARE



**GEO TILES**



**EZO TAPE**



**EZO STAND OFF**

\*Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order

**Thank you for your order!**


For questions or concerns regarding your order or installation, please contact customer service at 1-844-441-1122 or via email at [sales@ayrsonics.com](mailto:sales@ayrsonics.com) (Canada) or [info@usa.ayrsonics.com](mailto:info@usa.ayrsonics.com) (USA).

ASSEMBLY INSTRUCTIONS


# GRID CANOPY/ACOUSTICAL NET

EZO CLAMP SUSPENSION


- 1** Remove paper backing from one side of ezo stand offs and apply to ezo product  
\*Ensure most stand offs are applied to install vertically every 12-16"
- 2** Use roller to burnish stand off against ezo product to ensure adhesion of tape and ezo

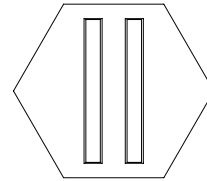


**6"-12" GEOTILES  
REQUIRE  
2 STAND OFFS**

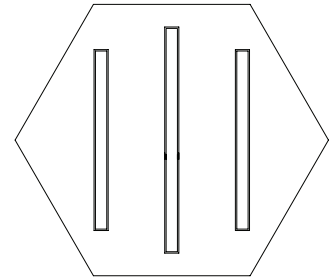


**12"+ GEOTILES  
REQUIRE  
3+ STAND OFFS**

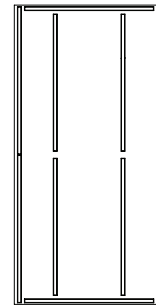

**4'X8' SHEETS**

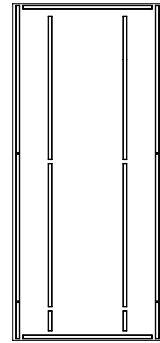

**4'X9' SHEETS**

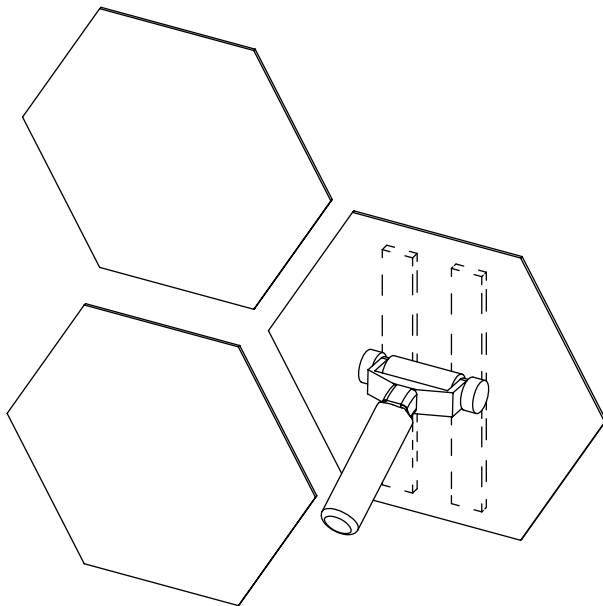

- 3** Locate placement on wall, level and mark with pencil.
- 4** Remove paper backing from tape and apply to wall.
- 5** Burnish ezo with roller taking care only to apply pressure only where ezo stand offs are located.

**RECOMMENDED TOOLS**

Roller - Level - Tape Measure - Utility Knife

**Thank you for your order!**

For questions or concerns regarding your order or installation, please contact customer service at 1-844-441-1122 or via email at [sales@ayrsonics.com](mailto:sales@ayrsonics.com) (Canada) or [info@usa.ayrsonics.com](mailto:info@usa.ayrsonics.com) (USA).