



ASSEMBLY INSTRUCTIONS

# V NOTCH SHEET/TACK BOARD

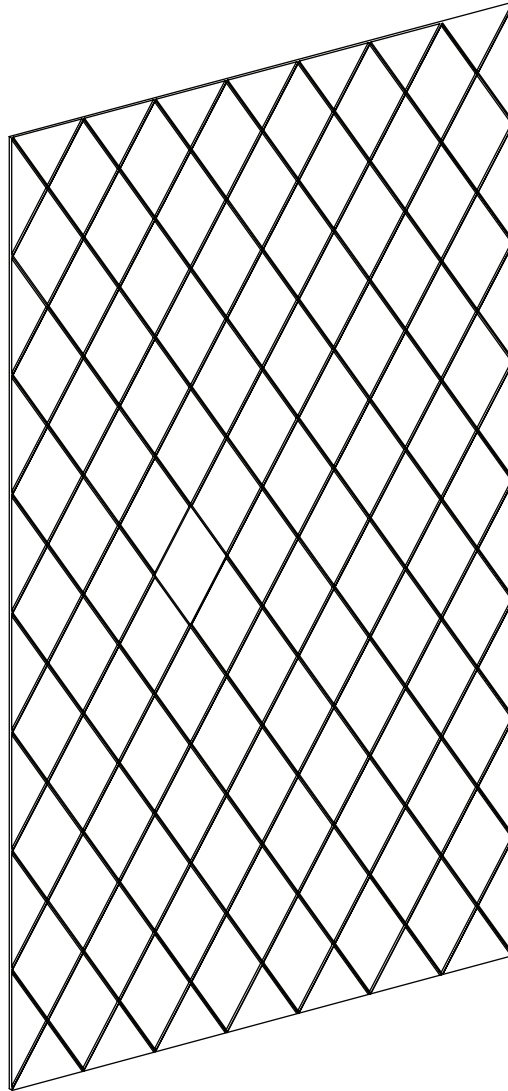

## INSTALLATION HARDWARE



**EZO TAPE**

\*Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order

**Thank you for your order!**


For questions or concerns regarding your order or installation, please contact customer service at 1-844-441-1122 or via email at [sales@ayrsonics.com](mailto:sales@ayrsonics.com) (Canada) or [info@usa.ayrsonics.com](mailto:info@usa.ayrsonics.com) (USA).

ASSEMBLY INSTRUCTIONS


# V NOTCH SHEETS/TACK BOARDS

EZO TAPE

- 1** Apply EzoTape to outer edges of reverse side of product approximately 1/8" inset from edge.
- 2** Apply EzoTape in vertical direction every 12-16" (16" for 9mm material; 12" for 12 mm material).
- 3** Use roller to burnish tape to ensure proper adhesion to Ezo.

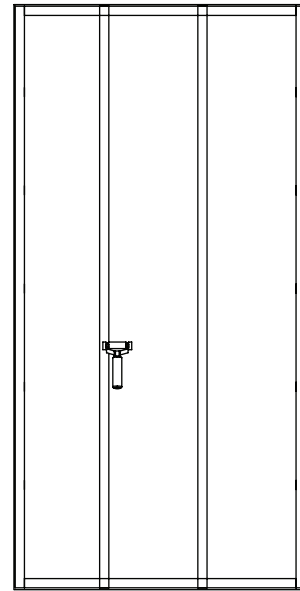

- 4** Locate placement on wall, level and mark with pencil.
- 5** Remove paper backing from tape and apply to wall.
- 6** Burnish Ezo with roller to ensure proper adhesion to wall.

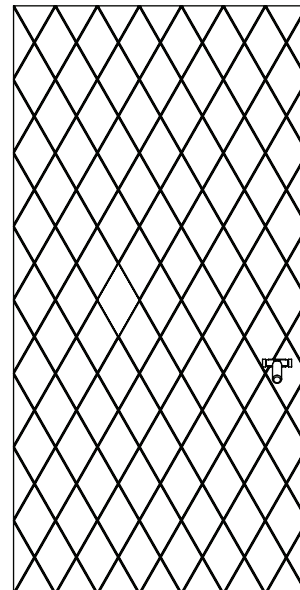

**RECOMMENDED TOOLS**

Level - Laser - Roller - Knife

**Thank you for your order!**

For questions or concerns regarding your order or installation, please contact customer service at 1-844-441-1122 or via email at [sales@ayrsonics.com](mailto:sales@ayrsonics.com) (Canada) or [info@usa.ayrsonics.com](mailto:info@usa.ayrsonics.com) (USA).